



GUARANTEE:

Terms & Conditions

Guarantee covers:

All parts and labour resulting from defective components, materials or workmanship for up to 24 months.

Guarantee does not cover:

Inappropriate use, accidental damage, mistreatment or service carried out by anyone other than an Ocean Safety approved service station, damage resulting from normal wear or dated or consumable components.

Guarantee is invalid if:

The registration card is not completed fully and returned to Ocean Safety either by post or online, the JonBuoy® product is not maintained according to the instructions detailed within this manual including annual servicing intervals.

If you have any questions regarding your guarantee or warranty please contact Ocean Safety for further details.

RECOMMENDATIONS:

It is recommended that if your vessel is not in use that your JonBuoy® Inflatable Rescue Sling is removed and kept in a dry storage facility.

This will prolong the life of the product. Alternatively, cover your unit with a waterproof cover during times the vessel is not in use. It is the owners responsibility to remove the cover should the vessel be in use, otherwise the product will not work as required.

SERVICING:

Your JonBuoy® Inflatable Rescue Sling must be serviced **annually** at an approved JonBuoy® service station. The recommended first service date is defined by the black sticker on the rear of the container. The outer number denotes month and year indicated in a circle.

An **annual** service is essential to ensure the life of the product is prolonged and to maintain warranty.


To find your nearest service station check our website or contact us:



Ocean Safety
Saxon Wharf, Lower York Street,
Southampton, SO14 5QF, UK

+44(0) 2380 720 800
info@oceansafety.com
www.oceansafety.com


ART105023 REV01

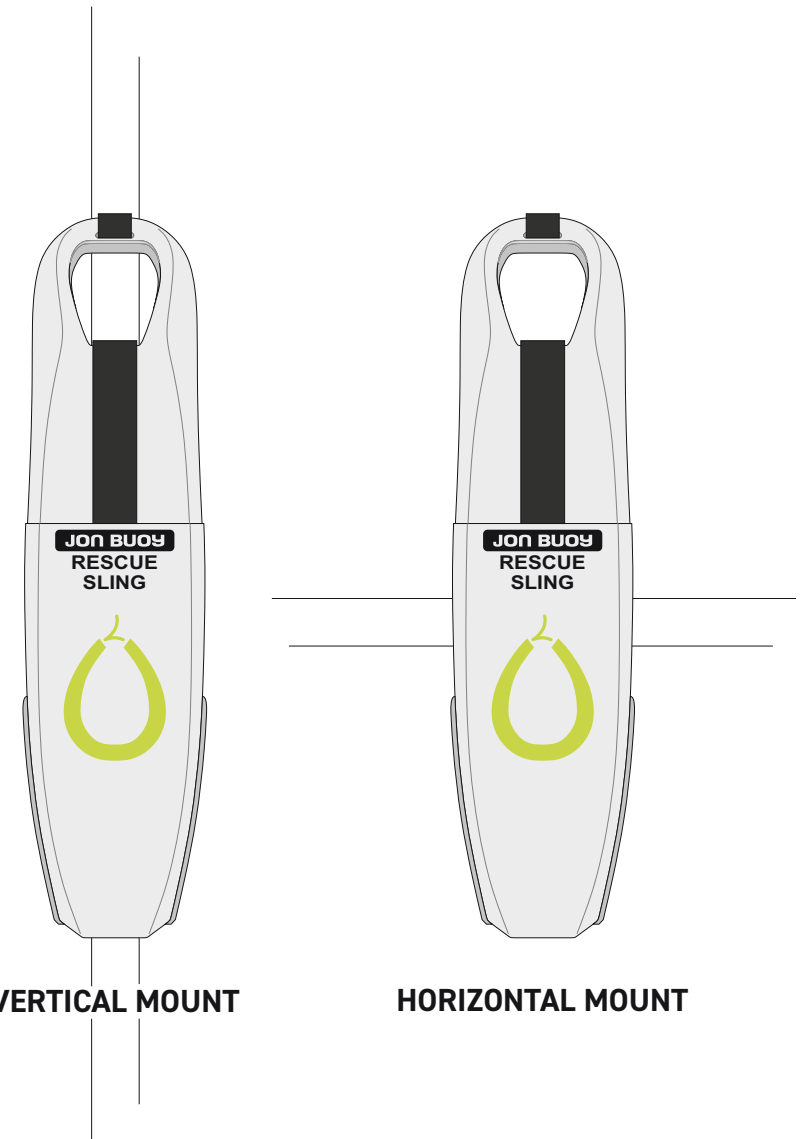


This leaflet details the installation and mounting instructions of the Inflatable Rescue Sling in either a vertical or horizontal orientation.

MOUNTING THE BRACKET:

Mount the inflatable JonBuoy Inflatable Rescue Sling so it faces **inwards**

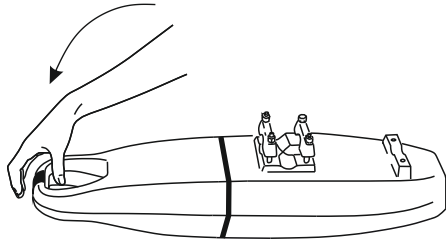


1. Place the case flat on the front side of the container.

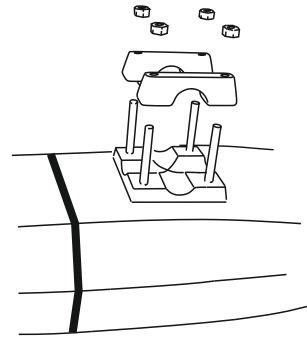

2. Remove the nuts from the rear bolts, then remove the black clamps.


HORIZONTAL MOUNTING:

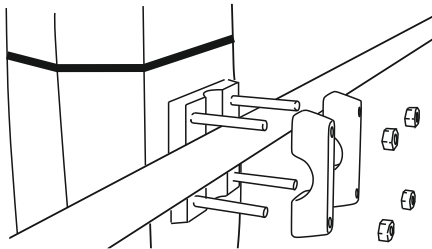

1. Lift the container by the handle, and place the bracket over the horizontal rail you wish to mount to.


Make sure the black clamps are vertical.

2. Slide the black clamps over the bolts and screw the nuts on by hand.

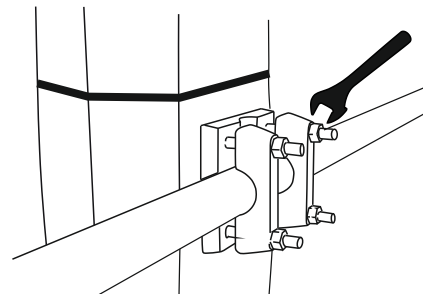

3. Tighten the Nyloc nuts until the bracket does not rotate on the bar when pushed.


VERTICAL MOUNTING:

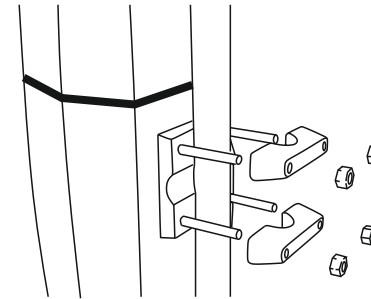

1. Lift the container by the handle, and place the bracket over the vertical rail you wish to mount to.

Make sure the black clamps are horizontal

2. Slide the black clamps over the bolts and screw the nuts on by hand.

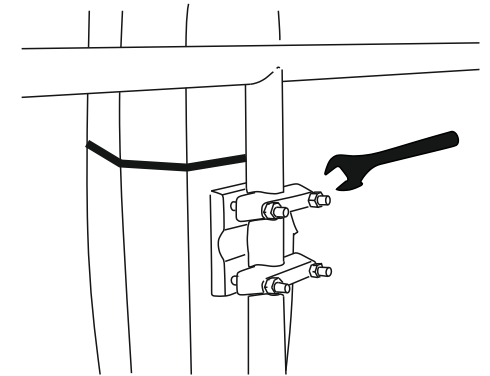

3. Tighten the Nyloc nuts until the bracket does not rotate on the bar when pushed.

AFTER USE:

1. Depress the oral tube valve using the cap on the oral inflation tube and deflate the product.
2. Rinse the unit with fresh water and leave to dry in a cool and well ventilated area.
3. Once dry, pack the product up and send it to your nearest Ocean Safety approved service station.

WARNING - DO NOT ATTEMPT TO REPACK YOUR PRODUCT FOR REUSE, ONLY AN APPROVED SERVICE STATION CAN REPACK AND REARM THE JONBUOY PRODUCT TO THE STANDARD REQUIRED.

